 
 


Firmware Update Procedure for LC60E69U

 
1. Extract the file “xxxxx.bin” into the root directory of the USB storage device.
2. Power OFF TV and connect the USB device into the USB port labeled SERVICE on the TV.

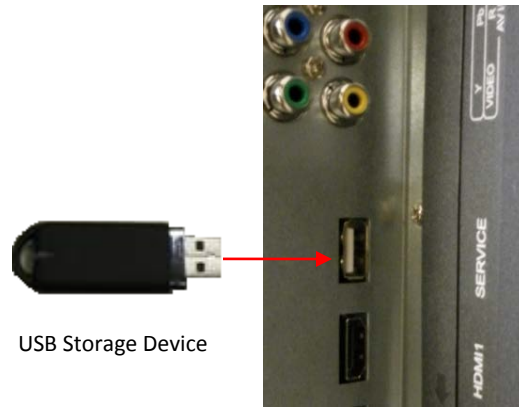

3. Power ON TV, the TV will automatically detect the firmware file – **DO NOT** remove USB device or power off TV. After firmware update is completed the TV will automatically power off. **Note:** The LEDs will blink during the upgrade.

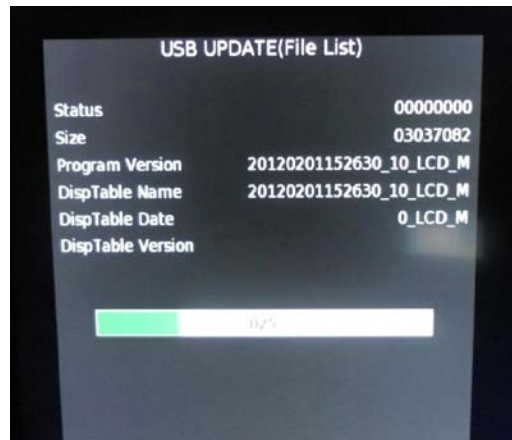

4. Remove USB device and disconnect AC power and reconnect AC power. Power TV ON and perform Initial Setup.
5. To verify the new version, Press [Menu] + 1147 on the RC, the Version Info will be display at the top of the screen.

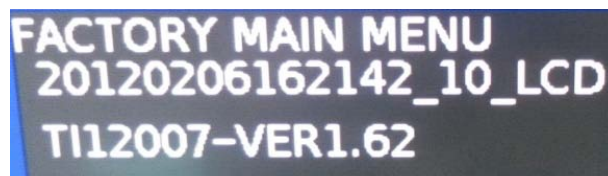

FACTORY MAIN MENU
20120206162142_10_LCD
T112007-VER1.62