



Software Upgrade

LC40LE431U-UA/LC40LE433U-UA

1. Copy the correct software file (.bin) to USB disk.
2. Insert the USB drive to the SERVICE terminal on the TV.
3. Turn TV on
4. Press Input + 2580 on RC
5. Select SW Upgrade press enter
6. Press " Yes " to start update (progress bar will appear)
7. Remove the USB memory device
8. Turn off the power and unplug the AC cord.
9. Plug the AC cord again and turn the power back on
10. Press Menu + 0000 and select Version Info to check version

USB used for Service Only

