

## Software Upgrade

LC39LE440U/LC50LE440U

- I. Copy the correct software (.pkg) to USB disk.
- II. Turn on TV.
- III. Press Menu, select Information, and then select Identification - check current version, press return.
- IV. Insert the USB device to USB port on TV.
- V. Turn TV power off.



- VI. Turn TV power on - TV will upgrade by itself after detecting the USB disk  
**Note:** *There is no display during the upgrade. TV's LED will flash during upgrade process*
- VII. After upgrade process is complete, the TV will reboot.
- VIII. Remove the USB disk from TV.  
**Note:** *There are no prompts on the TV, remove the USB disk when the LED turns green*
- IX. Press Menu, Select Information, then Select Identification.
- X. Check the version.