 
 


AQUOS® LCD TV LC-60LE630U / LE6300U Firmware Update Instructions:

1. Copy the firmware file
"JAS_DTV_US_P101_V2.00F_AP.BIN" out of
 the .ZIP file, and into the Root directory of a
 USB memory stick.
2. Turn off the TV.
3. Unplug the AC cord of the TV.
4. Insert the USB memory stick containing
 the firmware update file into the USB service
 port on the side of the AQUOS LCD TV.

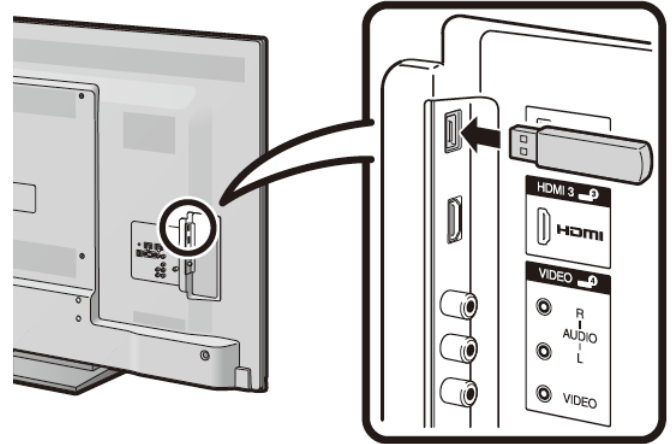

5. Press and hold the [POWER] button on
 the side of the TV.
6. While holding the [POWER] button,
 plug the AC cord into the outlet.
7. Continue holding [POWER] for
 approximately 5 seconds.

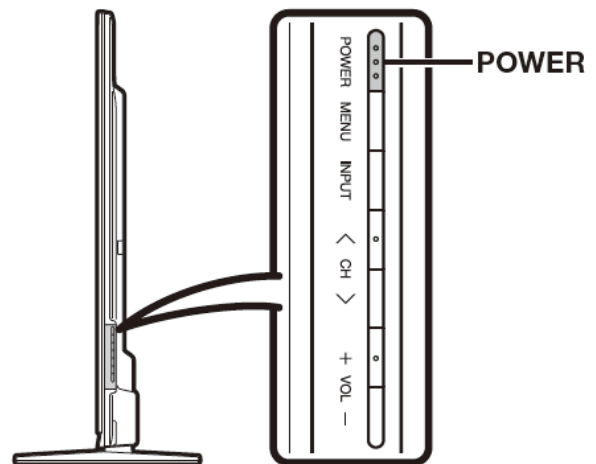

8. When the Center Icon starts to blink,
 let go of the [POWER] button.
9. The Center Icon will blink steadily for
 approx. 1 minute. There will be no image on
 the screen during this time.
10. Once the TV has completed updating
 the firmware, the Center Icon will blink faster.
11. Unplug the AC cord from the outlet.
12. Wait approx. 10 seconds before
 plugging the AC cord back in.
13. The TV will power on automatically
 when the AC cord is plugged in.

